

Demerx 40030, 40031, 40032

Mixer Cartridge Replacement / Byte av blandarinsats

1. Unscrew the handle rod.
2. Loosen the grub screw using an allen key.
3. Pull out the handle.
4. Take out the plastic washer.
5. Require a longnose plier.
6. Screw out the retaining nut.
7. Screw out the cover cap,
8. Take out the cartridge and replace,

1. Skruva loss handtagsknoppen.
2. Lossa stoppskruven med en insexnyckel.
3. Dra av handtaget.
4. Ta bort plastbrickan.
5. Använd en långnäbbstång eller spetstång.
6. Skruva loss låsmuttern
7. Skruva loss täckkåpan.
8. Ta ut och byt blandarinsatsen.

